


Instructions to update Firmware for C3 and InBio Access Control Panels

ZKAccess Support 732 412 6007 | support@zkaccess.com


1. Go to zkaccess.com hover over **Downloads** and then click **Software Downloads** in the dropdown menu.



2. Scroll down the page and download the appropriate firmware for your C3 or inBio panel.

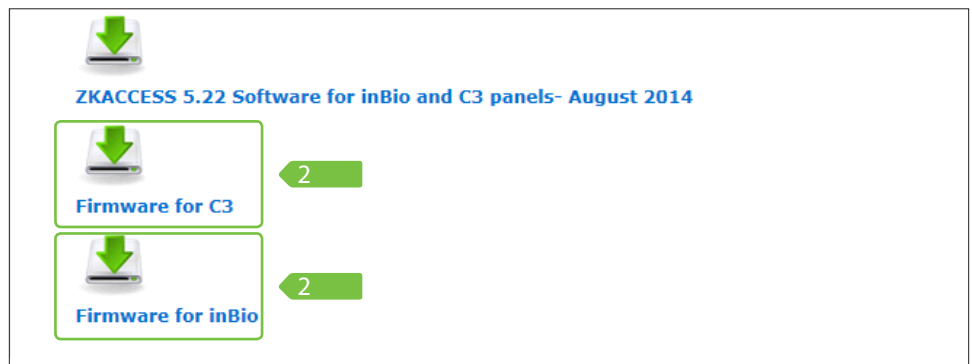


3. The downloaded file is compressed. Using WinRar or any other compatible software, **extract emfw.cfg** to your computer

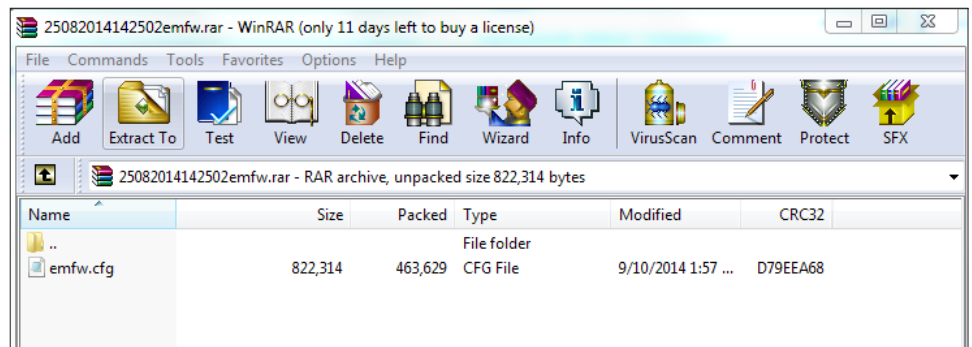


If you do not have software to extract compressed files, Scroll up on the same page to find **Winrar 32** or **Winrar 64** to download


4. Add the panel that needs the firmware update.

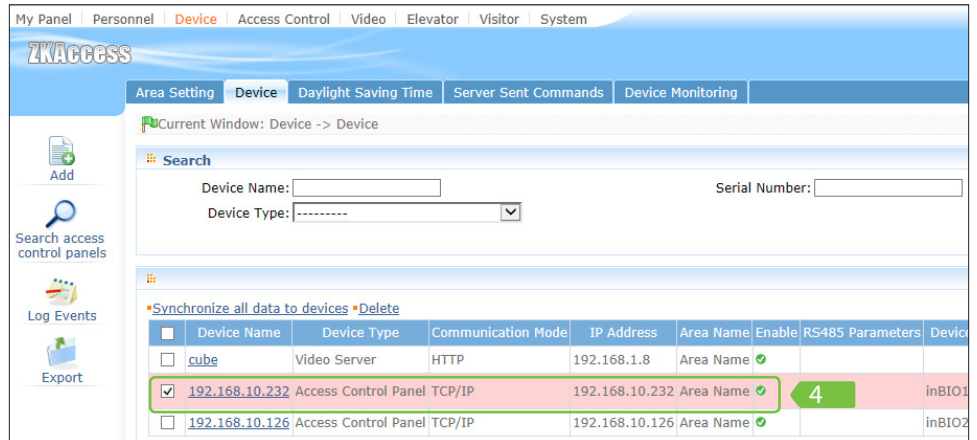

5. Go to **Access Control** > **Door Configuration**. Select your panel then hover over **More...** and click **Upgrade Firmware**.

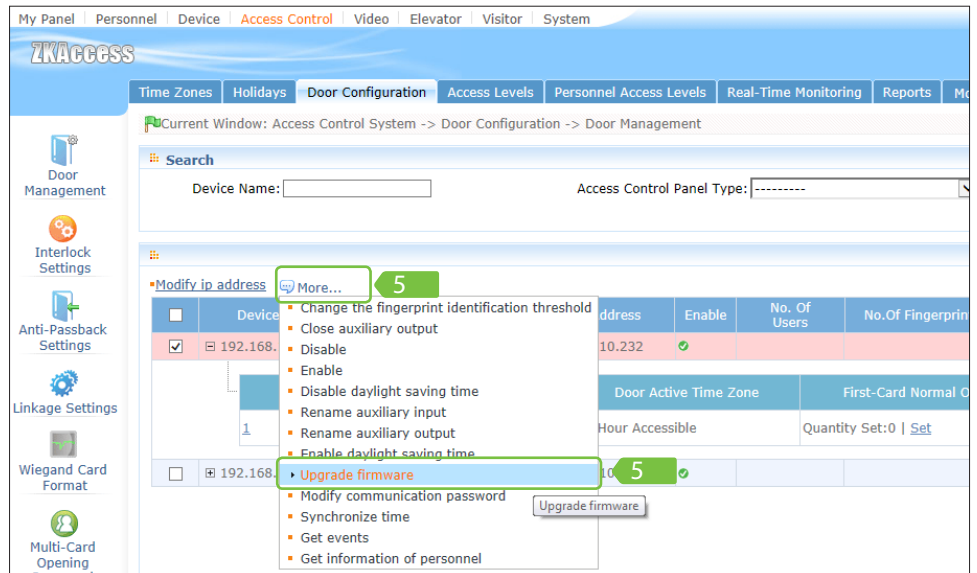

6. **Browse** and select the **emfw.cfg** file. Click **Open** now click **OK**. Wait for upgrade successful message.

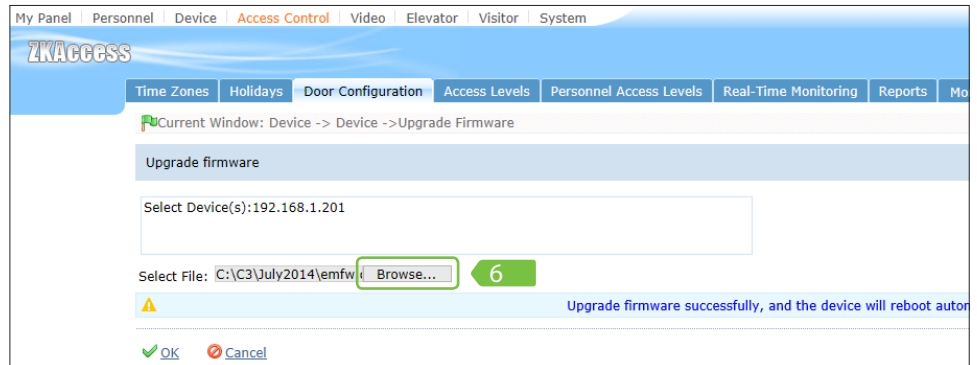

7. Go to **Device** > **Device Monitoring**. When the commands list reaches "0" the device is ready for use.

8. If the device says connection timed out, click **Cancel** > **OK** and wait for reconnection.

